

Data sheet

• **OMNIPOWER® CT**

- Current transformer meter
- Apparent power values per phase and total (KVA, PF)
- Power Quality Measurements according to EN 50160
- Optimized for Smart Metering systems
- Secured against tampering
- Resistant to errors in the supply network
- Ultra-low power consumption
- Built-in radio communication
- Transformer ratio up to 3000A/5A or 600A/1A
- Type approved according to:
 - Active energy
EN 50470-1 (MID)
EN 50470-3 (MID)
 - Active energy
and reactive energy
IEC 62052-11
IEC 62053-22
IEC 62053-23
- Communication protocol:
 - DLMS/COSEM



Contents

Application	2
Functions	3
Approvals	6
Technical data	6
Connections	8
Communication	8
Consumer communication channel (CCC) module	8
Transformer ratio	8
Typical accuracy charts (In = 5A)	9
Configuration – hardware	10
Configuration – software	11
Installation	17
Connection diagrams	17
Safety and installation guidelines	18
Dimensions	19
Accessories	19

Application

OMNIPOWER® CT is a 3-phased current transformer electricity meter for registration of electric energy. The meter is fully electronic without movable parts. Thus, energy registration is not affected by shock or impact during transport and mounting. Furthermore, measurements are correct no matter the physical mounting direction.

Energy is determined by simultaneously measuring voltage and current. The current is measured via current transformers.

The easily readable display scrolls automatically between readings, or readings can be changed manually by activating the left push button. The required display readings as well as their order are configurable.

In addition to being read from the display, data can be collected via Radio Mesh network, optical output or from the module area. The unique module area also permits external changing of tariffs, pulse inputs and outputs, and configuration as well as a wide range of communication media.

A Consumer Communication Channel is available for data exchange with Smart Home products.

From the factory, the meter can be configured to measure both imported and exported energy. The meter makes accurate measurements whether it measures 1, 2 or 3 phases. Measurements are saved in a permanent memory.

As default, the OMNIPOWER® CT meter can generate load profiles in all four quadrants.

A load profile provides detailed information about consumed and produced energy. An additional logger with 24 channels contains data for analysis purposes.

The OMNIPOWER® CT meter is also designed to support extended analysis of the main grid using measurements of THD (voltage), Power Factor, Voltage unbalance, Voltage variations and sags and swells.


In order to minimise the manual configuration during installation, the meter is preconfigured from the factory. Furthermore, the meter can be reconfigured via a Smart Metering system.

Functions

Display

OMNIPower® CT is provided with a Liquid Crystal Display (LCD). The registers that can be read from the display depend on the chosen configuration. It is also possible to remotely configure the display.

The display configuration is constructed as three independent display lists: One for automatic shift function, one for manual shift function and one for back-up-powered shift function. The display is constructed of segments as shown in the figure below.

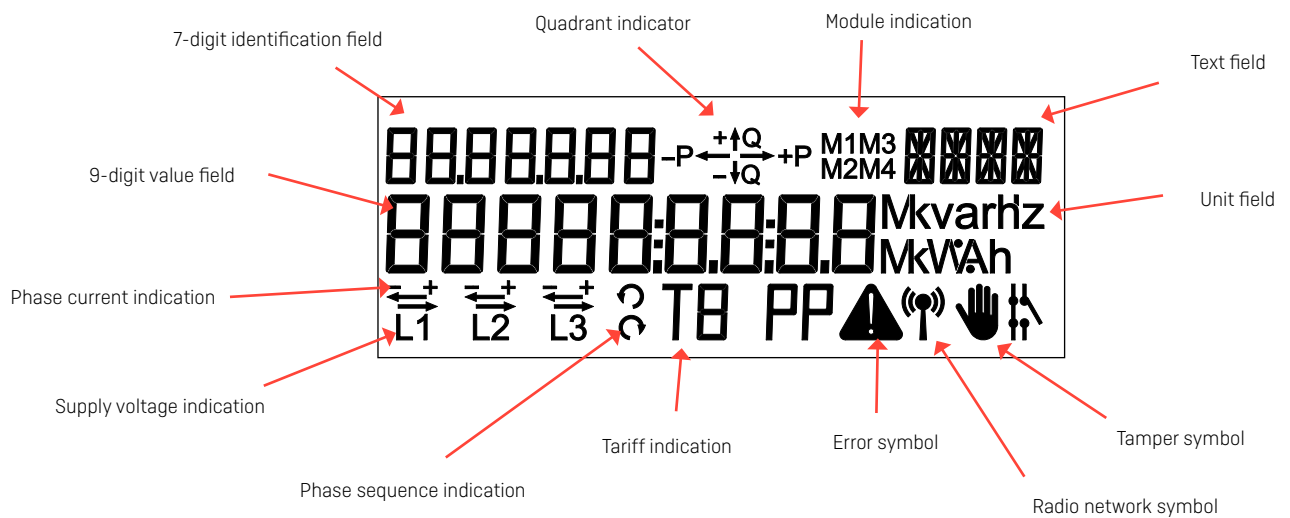

9-digit value field:	This field is used for displaying register values.
Unit field:	This field is used for displaying the units that are related to the value field.
7-digit identification field:	OBIS code identification of the value in the value field.
Quadrant indicator:	Indicates the current load type.
Text field:	Contains additional text in connection with the meter's function.
Module indication:	Indicates if and which modules that communicate in the display.
Error symbol:	Indicates critical internal errors.
Tamper symbol:	Indicates magnetic influence or opening of the terminal cover, either temporary or permanent.
Radio Network symbol:	Indicates communication with AMR system.
Tariff indication:	Indicates the current tariff if tariffs have been selected.
Phase sequence indication:	Indicates the phase sequence of the input phases. \curvearrowright = L1L2L3 \curvearrowleft = L1L3L2
Supply voltage indicator:	Indicates that voltage is above the minimum threshold (160 V).
Phase current indication:	Indicates that the load is above the minimum threshold (0,6 W).

Functions

Display

The automatic shift function (scroll) changes between the selected readings every 10 seconds. Historical data cannot be selected in the automatic shift function. Up to 16 readings can be selected.

The manual shift function changes through activation of the left push button. Up to 30 readings and the reading order can be selected. However, it is not possible to deselect the legal readings.

If the back-up-operated shift function is selected, it becomes possible to read the display, also when the meter is not power supplied. Up to 8 readings can be selected, and shifts between readings are made by activating the left push button.

The meter automatically returns from manual shift function to automatic scroll function two minutes after the last activation of the left push button.

Energy reading

OMNIPower® CT has one current transformer per measuring system and resistance division for voltage measurement.

Energy consumption is calculated as an expression of the current compared to the phase voltage and time.

The energy registration per measuring system is communicated to the meter's legal processor via the meter's own internal bus system and is summed in the meter's main registers.

Permanent memory

Measured and calculated data are stored in the meter's permanent memory. Data are stored by every change of energy register values.

Furthermore, the below mentioned values are stored at the end of a debiting period:

Various	Energy registers	Power registers
RTC/Quality info	Active positive primary energy A+	Peak power P+max
Hour counter	Active negative primary energy A-	Peak power P+ max RTC
Debiting stop counter	Reactive positive primary energy R+	Accumulated peak power P+max acc
Power threshold counter (A+)	Reactive negative primary energy R-	Accumulated peak power P+max acc Tariff 1
Pulse input	Apparent positive energy E+	Accumulated peak power P+max acc Tariff 2
Current transformer ratio	Apparent negative energy E-	Peak power Q+max
	Active positive primary energy A+ Tariff 1	Peak power Q+ max RTC
	Active positive primary energy A+ Tariff 2	Accumulated peak power Q+max acc
	Active positive primary energy A+ Tariff 3	Peak power P+max Tariff 1
	Active positive primary energy A+ Tariff 4	Peak power P+ max Tariff 1 RTC
	Reactive positive primary energy R+ Tariff 1	Peak power P+max Tariff 2
	Reactive positive primary energy R+ Tariff 2	Peak power P+ max Tariff 2 RTC
	Reactive positive primary energy R+ Tariff 3	Peak power Q+max Tariff 1
	Reactive positive primary energy R+ Tariff 4	Peak power Q+ max Tariff 1 RTC
		Peak power Q+max Tariff 2
		Peak power Q+ max Tariff 2 RTC
		Peak power S+max
		Peak power S+ max RTC
		Peak power S-max
		Peak power S- max RTC

Functions

Plug-in modules

OMIPOWER CT can be mounted/retrofitted with plug-in modules without subsequent reverification.

The module communicates with the meter's microprocessor via an internal data bus. This provides innumerable functional possibilities such as extra pulse output, tariff, load control and data communication via e.g. GSM/GPRS and M-Bus.

Optical reading

An optical sender/receiver is placed on the front of the meter. This optical connection can be used to read data or configure e.g. display set-up, meter number and other settings.

Changes via the optical connection can be made by using the software program METERTOOL OMNIPOWER®.

It is not possible to change the meter's legal data.

S0 pulse output

Emits pulses of secondary active energy at 5000 pulses per kWh. The maximum voltage, which may be connected to the S0 output, is 27 V DC [at 1 kΩ], and the maximum current, which can be drawn through the output, is 27 mA. The pulse time is 30 msec.

Load profile*

Load profiles can be configured to 15, 30 or 60 min. according to the integration period and for all four quadrants. The number of generated profiles corresponds to the selected energy type for the meter.

Integration period Energy type	15 min. days	30 min. days	60 min. days
A+	278	556	1113
A+/A-	235	470	941
A+/R+	235	470	941
A+/A-/R+/R-	180	360	720
A+/A-/R1/R2/R3/R4	145	291	583
A+/A-/R+/R-/R1/R2/R3/R4	122	244	489

* Load profile for Austria is limited to 60 days with a fixed integration period of 15 min

The logging depths listed above apply to OMNIA 3.0 firmware and newer.

Analysis logger

OMNIPOWER® CT is provided with a configurable analysis logger. The logging depth is depending on the configuration of the meter as well as the number of registers. The analysis logger can register data from up to 24 different registers at a time. OMNIPOWER® CT is available with default setting which can be reconfigured subsequently via METERTOOL OMNIPOWER® or a Smart Metering system.

Tamper proof

Apart from the mechanical sealing, the meter also reveals tampering (including opening of the meter cover). In case of attempts of tampering (mechanical or magnetic), an alarm is activated which is time and date stamped and saved to the permanent memory. Alarms can be automatically transferred via the communication infrastructure and, indicated on the display.

Power quality measurements

The OMNIPOWER® CT meter is also designed to support extended analysis of the main grid using measurements of the THD (voltage), Power Factor, Voltage unbalance, Voltage variations and sags and swells.

Approvals

OMNIPower® CT is type approved according to the Measuring Instruments Directive (MID) for active energy and according to the national requirements for other energy types, where required.

Approval

Type test according to:

– Active energy

– Reactive energy and active energy

Norm

EN 50470-1

EN 50470-3

IEC 62052-11

IEC 62053-22

IEC 62053-23

Various

Terminal

S0 pulse output

Optical reading

OBIS/EDIS codes

Interface classes

Data link layer

Norm

DIN 43857

DIN 43864

DLMS/COSEM

IEC 62056-61

IEC 62056-62

IEC 62056-72

Technical data

Measuring principle

– Current

– Voltage

Nominal voltage U_n

Single-phased current measurements via current transformers

Single-phased voltage measurements by voltage divider

3 x 230 VAC -20 % ... +15 % (for Aron meter only)

3 x 230/400 VAC -20 % - +15 %

Current

X_5	$I_{\min} - I_n (I_{\max})$
1	0.01 – 1(6) A
5	0.05 – 5(6) A

Accuracy class

Class 1 (IEC) / Class B (MID)

Class 0,5 (IEC) / Class C (MID)

Reactive energy: class 2 (IEC)

Nominal frequency f_n

50 Hz \pm 5 % or 60 Hz \pm 5 %

Phase displacement

Unlimited (however, not for Aron meters)

Operating temperature

-40 °C - +70 °C

Storage temperature

-40 °C - +85 °C

Technical data

Protection class	IP54				
Protection class	II				
Relative humidity, non-condensing	< 75 % year's average at 21 °C < 95 % less than 30 days/year, at 25 °C				
Weight	0.90 kg				
Application area	Indoors or outdoors in suitable meter cabinet				
Internal consumption*	<table> <tr> <td>Maximum power consumption of the current circuits with basic current</td><td>0.02 VA</td></tr> <tr> <td>Maximum power consumption of the voltage circuits</td><td>0.2 VA 0.1 W</td></tr> </table>	Maximum power consumption of the current circuits with basic current	0.02 VA	Maximum power consumption of the voltage circuits	0.2 VA 0.1 W
Maximum power consumption of the current circuits with basic current	0.02 VA				
Maximum power consumption of the voltage circuits	0.2 VA 0.1 W				
	Measured by notified body during type test. Measured at phase L1.				
Materials	Glass reinforced polycarbonate				
Data storage	Permanent memory, > 10 years without voltage				
Display	LCD, 7 mm digit height (value field) LCD, 5 mm digit height (OBIS-field, Text-field and Tariff readings) LCD, 3 mm digit height (voltage and power readings)				
Meter constant	10000 imp/kWh				
S0 pulse diode	10000 imp/kWh, kvarh Pulse time 30 ms ± 10 %				
S0 pulse output	5000 imp/kWh Pulse time 30 ms ± 10 %				

Real Time Clock (RTC)

Accuracy	Typically 5 ppm at 23 °C
Backup	Battery life > 10 years at 23 °C Supercap life > 10 years at 23 °C
Supercap operating time	7 days fully charged

Connections

Main terminals

Size	2.5 – 10 mm ² elevating connections
Screws	Ph2 or [4x1] straight slot Torque 1,8 Nm +/- 10%
Voltage output	0.25 – 1.5 mm ² , 5 mm cable terminal forks
Screws	TORX Tx 10
Torque	1.0 Nm +/- 10 %

Communication

OMNIPOWER® CT can be supplied or retrofitted with communication modules. The modules function as inputs and outputs for the meter. Mounting of modules does not require subsequent verification of the meter.

Communication Modules

Serial	Serial RS-485 or RS-232 communication or current loop with pulse inputs, tariff inputs or load control.
M-Bus	Reading via wired M-Bus system.
TCP/IP	Collection of consumption data via TCP/IP communication.
GSM/GPRS	Collection of consumption data via GSM/GPRS communication. Supports SMS reading.

Integrated radio

OMNIPOWER® CT can be provided with built-in radio communication for Kamstrup Radio Mesh Network.

Radio communication therefore requires no mounting/retrofitting of communication module. If the meter's module area is used for another type of communication, the built-in radio communication can be deactivated.

Consumer communication channel (CCC) module

In OMNIPOWER® CT it is possible to mount a CCC- (Consumer Communication Channel) module. The module can be used for communication and data exchange with Smart Home products such as energy displays and external relays. The CCC-module is mounted without using tools or breaking the seal of the meter. The mounting may be done by e.g. the consumer himself.

Transformer ratio






The transformer ratio in the OMNIPOWER® CT can be configured depending on the current transformer installed with the meter.

The ratio can be configured from 1 to 600 without reverifying the meter.

The primary energy is displayed in the display when entering the transformer ratio of the current transformer. The secondary energy reading always indicates the total consumption for the energy types chosen.

Changes in the ratio are stored in the permanent memory of the meter.

Typical accuracy charts ($I_n = 5A$)

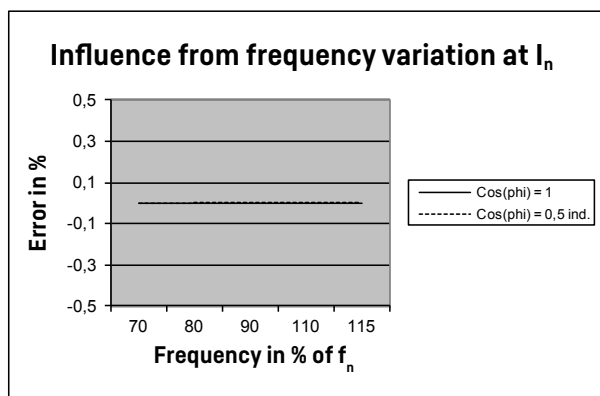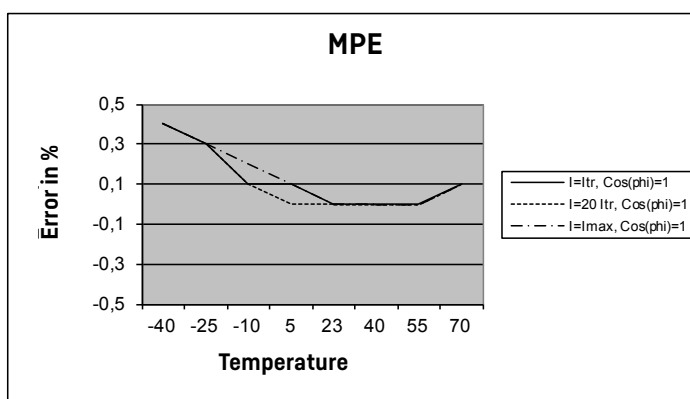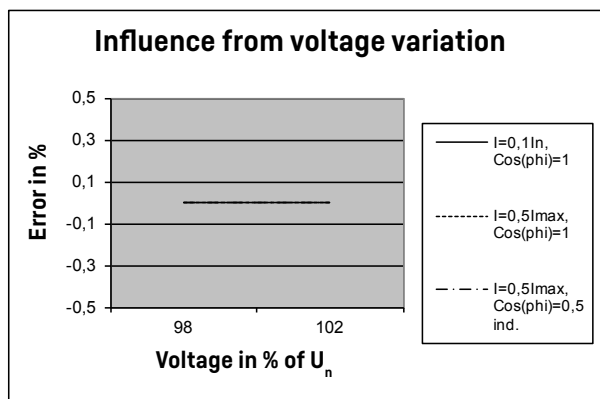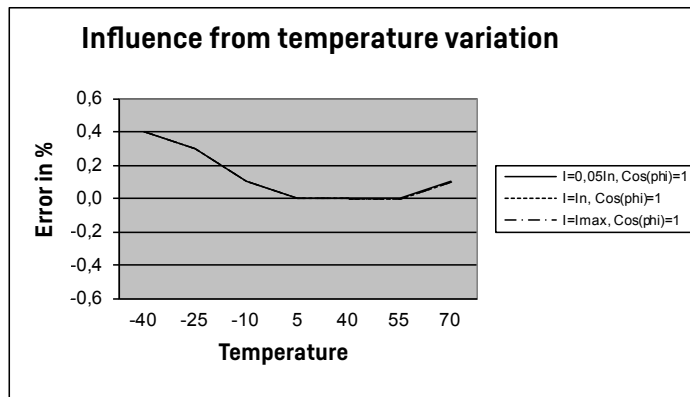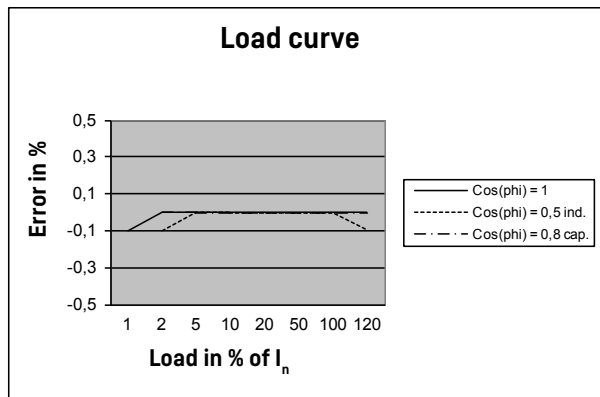

MPE (Maximum Permissible Error)

Error composed of:

- current load
- voltage variation
- frequency variation
- temperature variation

Configuration – hardware

	68	X ₁ - X ₂	X ₃ - X ₄	X ₅	X ₆ - X ₇	X ₈	X ₉ - X ₁₀	X ₁₁	X ₁₂	X ₁₃ - X ₁₄	X ₁₅ - X ₁₆
X₁ Meter type											
CT meter		5									
X₂ Type no. version											
OMNIPower®		1									
X₃ Housing											
Standard			1								
X₄ Measuring systems											
2 systems – Aron				2							
3 systems				3							
X₅ Current range											
0.01 – 1[6] A				1							
0.05 – 5[6] A				5							
X₆ Accuracy Class											
Class B					B						
Class C					C						
Class 1					1						
Class 0.5					5						
X₇ Generation											
Generation					D						
X₈ Variant											
1. Variant						1					
2. Variant						2					
X₉ Energy type											
A+						1					
A+/A-						2					
A+/R+						3					
A+/A-/R+/R-						4					
X₁₀ Breaker											
No breaker							0				
X₁₁ Communication											
No radio								0			
Radio (for OMNIA)								1			
X₁₂ Supply backup											
Supercap + battery									1		
X₁₃ Interface											
S0 output										1	
X₁₄X₁₅X₁₆ Country code											
See order form or contact Kamstrup											XXX

Configuration – software

	Z1	Z2	Z3	Z4
Z1 Decimals in display				
7.0 (Default)	1			
7.1 (Country specific)	2			
7.2 (Country specific)	3			
Z2 LED configuration				
LED switched off without consumption		1		
LED switched on without consumption		2		
Z3 Primary module configuration				
	I/O 1	I/O 2		
No function	-	-	00	
4-tariff	Input	Input	01	
4-tariff inverted	Input	Input	02	
Pulse in / Alarm in	Input	Input	03	
Pulse in / Alarm in inverted	Input	Input	04	
Pulse in / A+ out	Input	Output	05	
R+ out / A+ out	Output	Output	06	
2-tariff / Alarm in	Input	Input	07	
2-tariff inverted / Alarm in	Input	Input	08	
2-tariff / Alarm in inverted	Input	Input	09	
2-tariff inverted / Alarm in inverted	Input	Input	10	
2-tariff / A+ out	Input	Output	11	
2-tariff inverted / A+ out	Input	Output	12	
Pulse in / 2-tariff	Input	Input	13	
Pulse in / 2-tariff inverted	Input	Input	14	
Debiting stop pulse / -	Input	-	15	
A- out / A+ out	Output	Output	16	
Load control load / Status control	Input	Output	17	
Pulse in / Load tariff sync	Input	Output	18	
Pulse in inv. / Load tariff sync	Input	Output	19	
Pulse in / Load tariff sync inverted	Input	Output	20	
Pulse in inv. / Load tariff sync inverted	Input	Output	21	
4-tariff sync load control	Input	Input	22	
4-tariff sync load control inverted	Input	Input	23	
Load control 1 / Load control 2	Output	Output	26	
Pulse in / Load control	Input	Output	27	
Pulse in / Toggle Load control 1 & 2	Input	Output	28	
Z4 Integration period / Load profile period				
15 min.				2
30 min.				3
60 min.				4

Configuration – software

	Z5	Z6		Z7	Z8
Z5 Display configuration			Z7 Debiting logging interval		
See display order form or contact Kamstrup			None (externally controlled)	00	
Z6 Debiting stop date			Monthly	01	
1		01	Every second month, January	02	
2		02	Every second month, February	03	
3		03	Every third month, January	04	
4		04	Every third month, February	05	
5		05	Every third month, March	06	
6		06	Half-yearly, January	07	
7		07	Half-yearly, February	08	
8		08	Half-yearly, March	09	
9		09	Half-yearly, April	10	
10		10	Half-yearly, May	11	
11		11	Half-yearly, June	12	
12		12	Yearly, January	13	
13		13	Yearly, February	14	
14		14	Yearly, March	15	
15		15	Yearly, April	16	
16		16	Yearly, May	17	
17		17	Yearly, June	18	
18		18	Yearly, July	19	
19		19	Yearly, August	20	
20		20	Yearly, September	21	
21		21	Yearly, October	22	
22		22	Yearly, November	23	
23		23	Yearly, December	24	
24		24	Z8 Pulse out length / Alarm input		
25		25	30 msec pulse length / Alarm input deactivated	1	
26		26	30 msec pulse length / Alarm input active	2	
27		27	80 msec pulse length / Alarm input deactivated	3	
28		28	80 msec pulse length / Alarm input active	4	

Configuration – software

		Z10	Z11	Z12
Z10 Analysis logger setup				
Default setup		000		
Z11 Greenwich Mean Time (GMT)				
0	GMT		00	
1	+ 1 Hour (DK/NO/SE/DE/FR/ES)		01	
2	+ 2 Hours (FI)		02	
3	+ 3 Hours		03	
4	+ 4 Hours		04	
5	+ 5 Hours		05	
6	+ 6 Hours		06	
7	+ 7 Hours		07	
8	+ 8 Hours		08	
9	+ 9 Hours		09	
10	+ 10 Hours		10	
11	+ 11 Hours		11	
12	+ 12 Hours		12	
-11	- 11 Hours		13	
-10	- 10 Hours		14	
-9	- 9 Hours		15	
-8	- 8 Hours		16	
-7	- 7 Hours		17	
-6	- 6 Hours		18	
-5	- 5 Hours		19	
-4	- 4 Hours		20	
-3	- 3 Hours		21	
-2	- 2 Hours		22	
-1	- 1 Hours		23	
Z12 Unit pulse input				
None				00
kWh				01
m ³				02
L				03

Configuration – software

	Z13	Z14	Z15	Z16	Z17	Z18	Z20
Z13 Tariff control plan							
See tariff order form or contact Kamstrup	–						
Tariff disabled	000						
Module Port control	001						
Register control	002						
Z14 Load control plan							
See load control order form or contact Kamstrup	–						
Load control disabled	000						
Register control	001						
Z15 Daylight saving time / Summer-winter time table							
None			000				
EU			001				
Z16 Frequency code Protocol							
None				000			
CH 318 K				318			
EU 319 K				319			
SE 326 K				326			
SE 328 K				328			
SE 329 K				329			
NO 337 K				337			
NO 338 K				338			
NO 339 K				339			
DK 348 K				348			
DK 349 K				349			
FI 359 K				359			
PL 369 K				369			
AT 378 K				378			
AT 379 K				379			
Z17 Push button 2 setup							
See PB2 order form or contact Kamstrup					–		
No PB2 setup					000		
Z18 1107 configuration							
See 1107 order form or contact Kamstrup						–	
Disabled						000	
Mode A and C, UD (only available for variant 1)						001	
Mode A and C, UD2 (only available for variant 1)						002	
Z20 Calendar setup							
See Calendar setup order form or contact Kamstrup							–

Configuration – software

	Z21	Z22	Z23	Z24	Z25
Z21 Transformer ratio					
5 A/5 A 1 A/1 A	001				
10 A/5 A 2 A/1 A	002				
15 A/5 A 3 A/1 A	003				
20 A/5 A 4 A/1 A	004				
50 A/5 A 10 A/1 A	010				
75 A/5 A 15 A/1 A	015				
100 A/5 A 20 A/1 A	020				
120 A/5 A 24 A/1 A	024				
150 A/5 A 30 A/1 A	030				
160 A/5 A 32 A/1 A	032				
200 A/5 A 40 A/1 A	040				
300 A/5 A 60 A/1 A	060				
500 A/5 A 100 A/1 A	100				
1 000 A/5 A 200 A/1 A	200				
1 500 A/5 A 300 A/1 A	300				
2 000 A/5 A 400 A/1 A	400				
3 000 A/5 A 600 A/1 A	600				
Z22 Transformer ratio (unlocked / locked)					
Unlocked		1			
Locked		2			
Z23 Load profile, based on					
Primary energy			1		
Secondary energy			2		
Z24 Pulse output (module)					
Based on secondary energy				0	
Based on primary energy				1	
Z25 Debitlogger 2 interval					
Daily					1
Weekly					2
Monthly					3

Configuration – software

	Z26	Z27	Z28	Z29	Z30
Z26 – Alarm configuration					
No alarms enabled	000				
Z27 – Load profile data (DLMS)					
Absolute values		1			
Delta values [only available for variant 2]		2			
Z28 – Local interface encryption					
N/A [only for variant 1]			0		
Enabled [only available for variant 2]			1		
Disabled [only available for variant 2]			2		
Z29 – Load profile configuration					
A+				1	
A+/A-				2	
A+/R+				3	
A+/A-/R+/R-				4	
A+/A-/R1/R2/R3/R4 [only available for variant 2]				5	
A+/A-/R+/R-/R1/R2/R3/R4 [only available for variant 2]				6	
Secondary A+				11	
Secondary A+/A-				12	
Secondary A+/R+				13	
Secondary A+/A-/R+/R-				14	
Secondary A+/A-/R1/R2/R3/R4 [only available for variant 2]				15	
Secondary A+/A-/R+/R-/R1/R2/R3/R4 [only available for variant 2]				16	
Z30 – Debit 2 logger configuration					
Profile 01					1
Profile 02 [only available for variant 2]					2

Installation


Connect the meter in accordance with the installation diagram on the meter's type label.

Depending on the configuration, a fixed value will be displayed, or the display will change automatically between selected indications every 10 seconds.

It is possible to change the display reading manually by activating the left push button on the meter. The available readings will depend on the meter's configuration.

Connection diagrams

The valid connection diagram appears from the type label on the front of the meter.

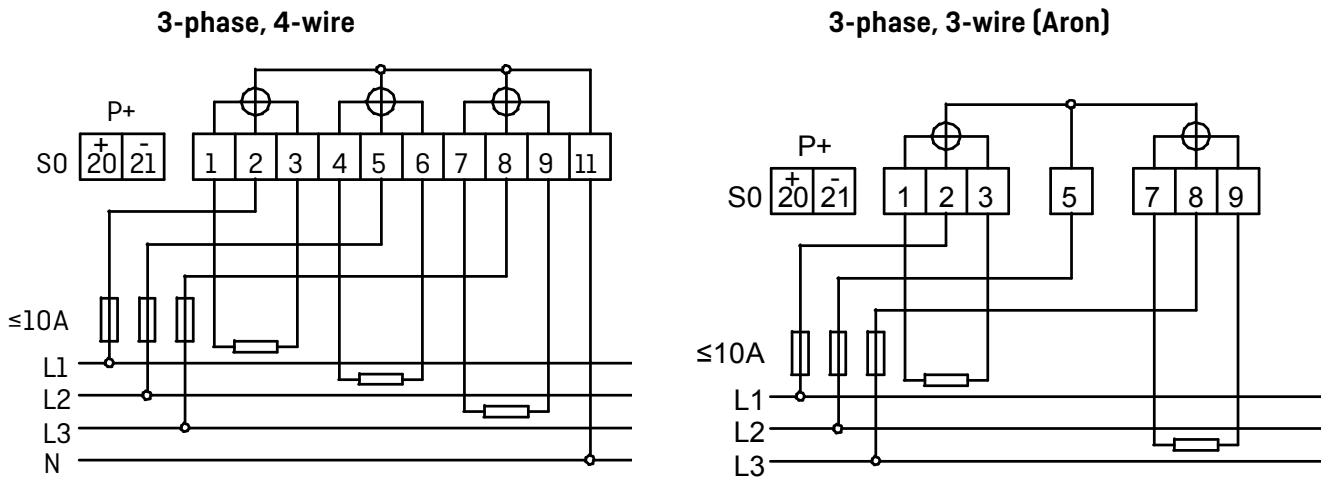

Safety and installation guidelines

The meter shall only to be used for measuring electrical energy and shall operate within the specified values only.

The meter must be switched off when working on it. It can be highly dangerous to touch connected meter parts.

Current local standards, guidelines, regulations and instructions must be observed. Only authorized personnel are permitted to install electricity meters.




Meters for direct connection must be protected against short circuit by a backup fuse in accordance with the maximum current stated on the meter.

The relevant backup fuse must therefore be removed and kept in a place where it cannot be inserted by unauthorized personnel.

The meter constant LED flashes proportionally to the consumed active energy.

Only authorized personnel must break the utility sealing.

Dimensions

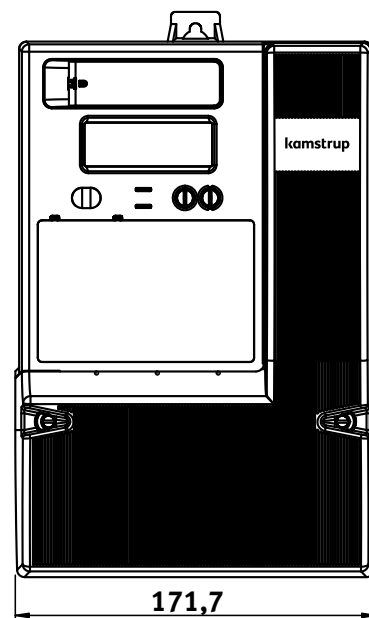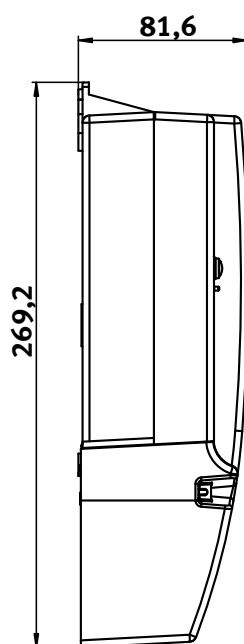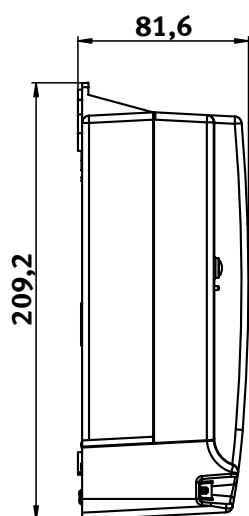

Accessories

Modules

IP101i, TCP/IP-module*	68 50 040
GSM8i 2G*	6819x0xxxxx
GSM8i 2G m/ 2x5A Load Control*	6819x5xxxxx
GSM8i 2G m/ RS-485 add-on*	6819x6xxxxx
OMNICON GSM**	681Axxxxxx
5A Load control module	68 50 058
M-Bus module, secondary addressing*	68 50 068
2 x 5A load control modules	68 50 069
RS485-module, multi drop*	68 50 072
Data-/pulse module, dual pulse, 9600	68 50 075
Tariff control, 4-tariff, 230 V input, current loop	68 50 076
Tariff control, 4-tariff, 230 V input	68 50 078
OMNICON MUC-module**	68 50 079
Earth fault module**	68 50 080
Earth fault module with MUC module**	68 50 081
Wireless M-Bus, Sub-metering	68 50 083

Software

Configurations SW, METERTOOL	68 99 580
------------------------------	-----------

Various

Standard meter cover	59 60 370
Long meter cover, 60mm	59 60 316
Optical reading head with USB plug	66 99 099
Optical reading head with 9-pole D-sub connector	66 99 102
METERTOOL kit for CT ratio programming	68 30 017

* for non-Kamstrup systems only

** for OMNIA system only

Kamstrup A/S

Industrivej 28, Stilling
DK-8660 Skanderborg
T: +45 89 93 10 00
F: +45 89 93 10 01
info@kamstrup.com
kamstrup.com